




Standard Metal Soffit Installation

For standard metal soffit construction. Our “Standard Channel” is best. This channel has a small lip that easily tucks between the Soffit and Fascia interface. This gives the system a seamless look to the home.




How this installs...

1. Insert the exposed lip directly into the interface between the fascia and the soffit. The face of the channel should face directly outward to have a seamless look.

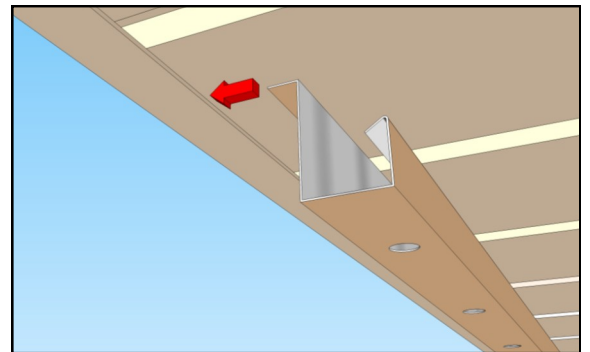

2. The channel may not enter smoothly depending on the location of the existing fasteners that are holding the fascia to the hidden frieze board. These fastener locations should be marked on the lip of the Trimlight channel and with tin snips, the lip can have wedge shapes removed to allow for the channel to enter without the impediment of the fasteners.

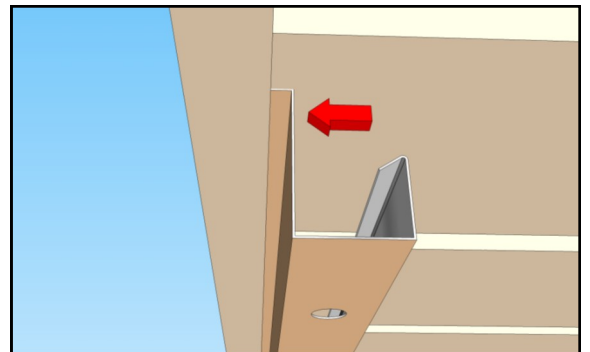

3. Once the channel is firmly in place. Use an appropriate fastener to hold the channel in place. A 1” or 1.25” self piercing screw is recommended to hold into the wooden frieze board behind the fascia covering.

The Trimlight channel is now ready to receive the RGB light diodes.

